



# Easi-Timer

An audio visual timer to help keep students on track with timed tasks



## User Guide

[www.tts-group.co.uk](http://www.tts-group.co.uk)




## Important Information

- Please retain the information in this User Guide for future reference.
- Please read all instructions fully before using.
- To clean, wipe the surface with a clean damp cloth.
- Do not allow the product to come into contact with water or any other liquids.
- Keep the product away from direct sunlight and heat.
- If your product malfunctions please switch it off and then back on again to reset it.

## Pack Contents

- Easi-Timer
- User guide

## Know Your Product

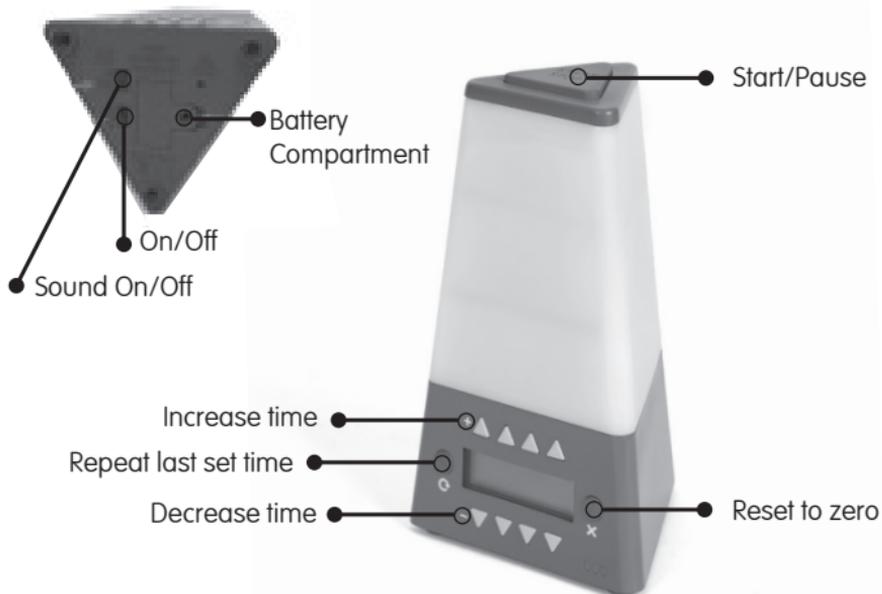

## Using Your Product

To turn the Easi-Timer on move the slide switch into the ON position, if you require sound move the slide switch into the ON position also.

To set the time press the green + or - buttons. A maximum time of 99 minutes and 59 seconds can be input into the timer.

Once your time has been set simply press the start/pause button on the top of the timer and your countdown will begin and the green light will be lit and a long single beep will sound. When the countdown timer has reached the halfway point the timer will light orange and beep twice. When the countdown time has reached zero, the timer will light red and beep three times.

The timer can be paused at any point during countdown by pressing the start/pause button. During pause whichever light is lit will flash intermittently. To resume countdown simply press the start/pause button again. The light will return to a solid colour. During any point of countdown the timer can be stopped and reset to zero by pressing the reset button.

To repeat the last countdown press the repeat button once, this will instantly restart the countdown of the previously set time as long as the reset button has not been pressed since the last input.

## Battery Precautions

- This product requires 3 x 1.5V AAA batteries (not included)
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short circuited.
- Only batteries of equal size and type should be used.
- Non-rechargeable batteries are not to be recharged.

## Replacing Batteries

- Remove the battery hatch cover and carefully remove the batteries and dispose of them responsibly.
- Insert new batteries, ensuring the correct polarity. Replace the battery hatch firmly and accordingly.
- Different types of batteries or new and used batteries are not to be mixed.
- Exhausted batteries are to be removed from the toy.



## Trouble Shooting

Problem	Solution
Product will not work	Ensure that the power slide switch is set to 'ON'
Product has no sound	Ensure that the sound slide switch is set to 'ON'
LCD Display is blank	Check if your batteries need replacing

## Technical Support

Please visit [www.tts-group.co.uk](http://www.tts-group.co.uk) for the latest product information.

Email [feedback@tts-group.co.uk](mailto:feedback@tts-group.co.uk) for technical support.

TTS Group Ltd.  
Park Lane Business Park  
Kirkby-in-Ashfield  
Nottinghamshire  
NG17 9GU, UK.  
Freephone: 0800 318686 Freefax: 0800 137525

Made in China, on behalf of TTS Group Ltd.

TTS Product Code:

**IT10014**



TTS is proud to be part of **RM** plc